 


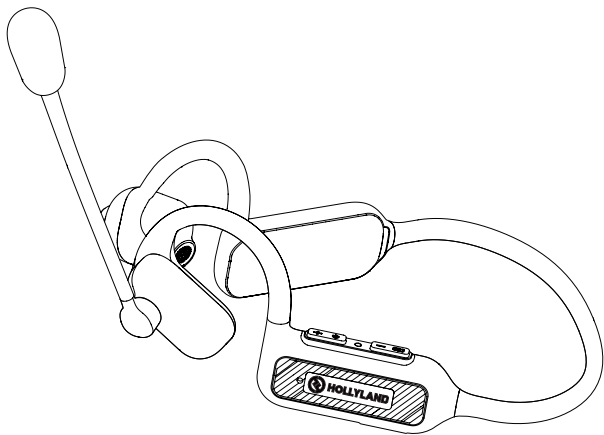

Solidcom C1 Air Wireless Intercom System

Quick Guide

V1.0

Preface

Thanks for choosing the Solidcom C1 Air Wireless Intercom System.

 
 
For detailed information, scan the QR code to access the User Manual available in English and other languages.

- [EN]** Please read this Quick Guide carefully. We wish you a pleasant experience. To obtain Quick Guide information in other languages, please scan the QR code below.
- [DE]** Bitte lesen Sie diese Kurzanleitung gründlich. Wir wünschen Ihnen ein angenehmes Erlebnis. Für die Kurzanleitung in einer anderen Sprache scannen Sie bitte den folgenden QR-Code.
- [ES]** Lea atentamente esta Guía rápida. Le deseamos una agradable experiencia. Para obtener información de la Guía rápida en otros idiomas, escanee el código QR que aparece a continuación.
- [FR]** Veuillez lire attentivement ce guide rapide. Nous espérons que votre expérience sera des plus agréables. Pour obtenir des informations sur le guide rapide dans d'autres langues, veuillez scanner le code QR ci-dessous.
- [IT]** Leggi questa Guida introduttiva rapida. Ti auguriamo un'esperienza piacevole. Per ottenere informazioni sulla Guida introduttiva rapida in altre lingue, scansiona il codice QR qui sotto.
- [PT]** Leia este Guia Rápido com cuidado. Desejamos que você tenha uma experiência agradável. Para obter informações do Guia Rápido em outros idiomas, digitalize o código QR abaixo.
- [TC]** 請仔細閱讀本快速指南。我們祝您體驗愉快。若要取得其他語言的快速指南資訊，請掃描下面的 QR 碼。
- [KR]** 이 빠른 가이드를 주의 깊게 읽으십시오. 즐거운 경험 되시길 바랍니다. 빠른 가이드 정보를 다른 언어로 알아보려면 아래 QR 코드를 스캔하십시오.

[JP] クイックガイドを熟読してください。ご体験をお楽しみください。他の言語でクイックガイド情報を取得するには、以下のQRコードをスキャンしてください。




Product Overview

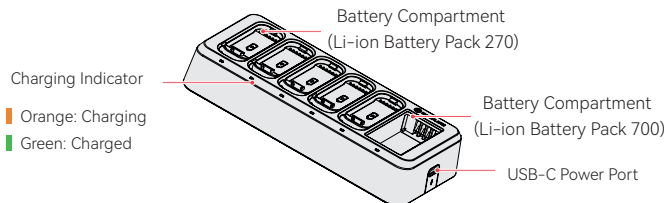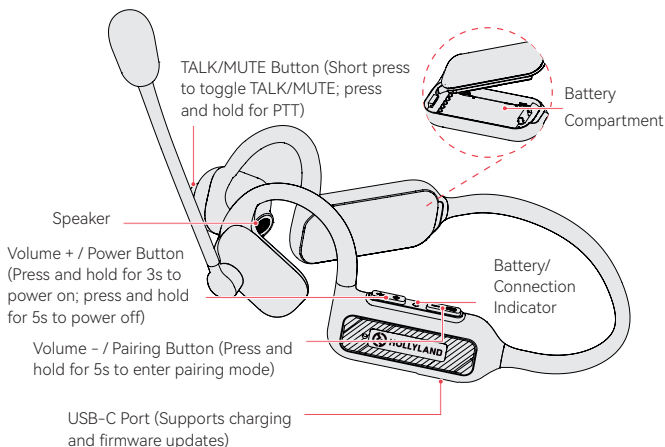

Product Overview

 Headset Status Indicator

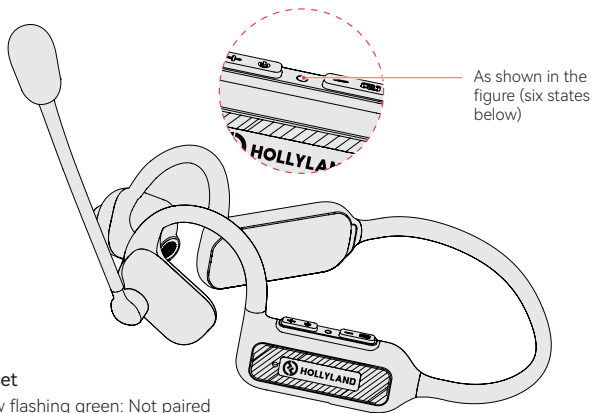

Headset

- ① Slow flashing green: Not paired
- ② Solid green: Paired
- ③ Fast flashing green: Pairing in progress
- ④ Solid red: Connected and muted
- ⑤ Slow flashing red: Less than 10 minutes of battery remaining; continues flashing until power off
- ⑥ Alternating red and green: Firmware upgrading

 
Audio Prompts (Beep Tones)

- ① Paired successfully
- ② Reconnected successfully
- ③ Maximum volume reached
- ④ Mute/Talk status switched
- ⑤ Low battery alerts: 30 minutes remaining / 10 minutes remaining
- ⑥ Disconnection alert


Operation Guide

① Install & Remove the Battery

■ Installing the battery: Insert the battery into the battery compartment

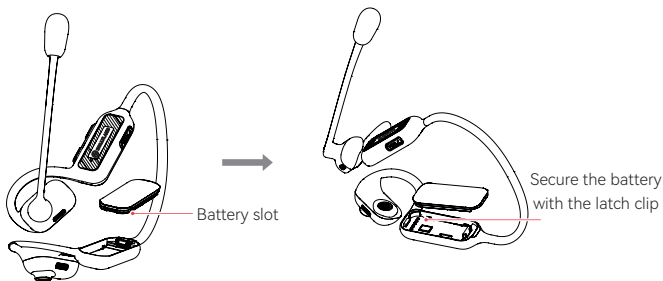

 ■ Removing the battery: Remove the battery from the compartment

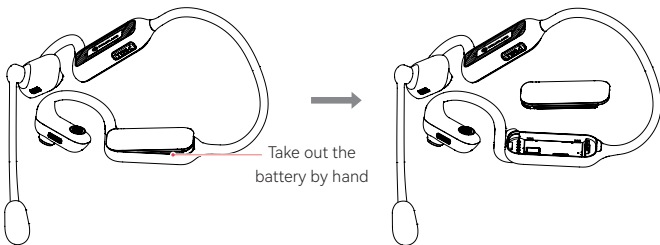


② Power On & Connection

1. Press and hold the Volume + button for 3 seconds to power on
2. The indicator changes from flashing to solid, indicating the master and remote headsets are successfully connected

Operation Guide

 ③ Microphone Control

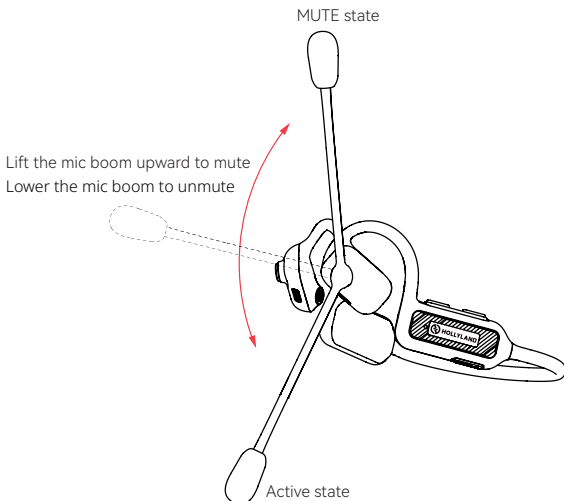

④ Ready to Use

The system is now ready for operation

Headset Pairing

All remote headsets are pre-paired with the master headset at the factory. No pairing is required for initial use.

Pairing is only needed when adding a new headset to an existing system. During pairing, ensure the master headset and all connected remote headsets are powered on and already connected.

1. Press and hold the [A] button on the Solidcom C1 Pro master headset and the Volume - button on the Solidcom C1 Air headset simultaneously for 5 seconds. The indicator will flash rapidly while pairing.
2. Once pairing is successful, the indicator turns solid.
3. A single master headset can pair with up to 10 remote headsets.

Specifications

Solidcom C1 Air Wireless Headset	
Transmission Range	300m (LOS)
Modulation Mode	GFSK
Transmit Power	20 dBm
Receiver Sensitivity	< -92 dBm
Battery Capacity	270 mAh
Charging Time	< 3 hours
Frequency Response	150 Hz - 7 kHz
Microphone Type	Electret
Maximum Input SPL	112dBSPL
Output SPL	Typical 98dBSPL@94dBSPL,1KHz
Environmental Noise Reduction	> 20db
Net Weight	With battery: 42g Without battery: 35.4g
Battery Life	Approx. 6 hours
Temperature Range	Operating: 0 to +45°C Storage: -10 to +60°C

Specifications

6-Slot Charging Base	
Port	USB-C
Dimensions	171.4*73.1*30.0mm
Weight	≈ 181.7g
Charging Power	<5W
Power Supply	4.8-5.4V
Charging Time	< 3 hours
Temperature Range	Operating: 0 to +45°C Storage: -10 to +60°C

Note: Operating frequency bands and RF transmission power may vary by country or region.

Disclaimer

Safety Precautions

Do not place the device near or inside heating devices (including but not limited to microwave ovens, induction cookers, electric ovens, electric heaters, pressure cookers, water heaters, and gas stoves) to prevent the battery from overheating and exploding. Use the original charger, data cables, and batteries provided with the product. Using unauthorized or incompatible chargers, data cables, or batteries may cause electric shock, fire, explosion, or other dangers.

Support

If you encounter any problems in using the product or need any help, please contact Hollyland Support Team via the following ways:

 Hollyland User Group

 HollylandTech

 HollylandTech

 HollylandTech

 support@hollyland.com

 www.hollyland.com

Statement:

All copyrights belong to Shenzhen Hollyland Technology Co., Ltd. Without the written approval of Shenzhen Hollyland Technology Co., Ltd., no organization or individual may copy or reproduce part or all of any written or illustrative content and disseminate it in any form.

Trademark Statement:

All the trademarks are owned by Shenzhen Hollyland Technology Co., Ltd.

Note:

Due to product version upgrades or other reasons, this Quick Guide will be updated from time to time. Unless otherwise agreed, this document is provided as a guide for use only. All representations, information, and recommendations in this document do not constitute warranties of any kind, express or implied.

HOLLYVIEW

Powered by Hollyland

Manufacturer: Shenzhen Hollyland Technology Co., Ltd.

Address: 8F, 5D Building, Skyworth Innovation Valley, Tangtou Road,
Shiyan Street, Baoan District, Shenzhen, 518108, China

MADE IN CHINA